


**Note!**

Installation, fuse, mains switch, emergency switch and safety measures to conform to statutory regulations.  
Warning! Earth wire yellow/green must not be used as control wire.


- Contact opens as temperature rises.
- Total current consumption by all units must not exceed 10 A.
- Warning! Only one MEC2 to be assigned to each regulator unit.  
The MEC2 may be incorporated in the controller module or connected via the room assembly set (additional equipment) to one of the ZM or FM modules.
- Connection option for safety components.
- Switch S1 to be closed if several ECOCAN-BUS components are connected, i.e. to the first and last components.
- Screening is not needed for standard applications. (Screen is connected to one side only).

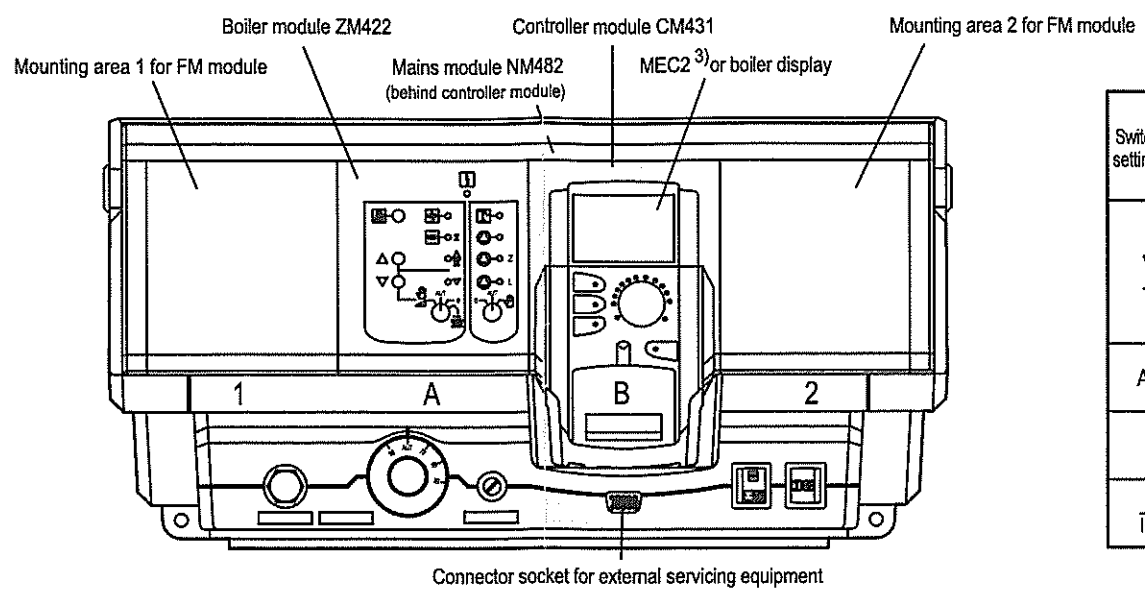

**Switch positions**

Switch setting	Stage 2/ (modulating)			Switch setting	(PH) k4	(PS) k5	(PZ) k6
	Stage 1 k1	k2	k3				
	-	Key pressed	Key pressed	0			
AUT	regulating mode	regulating mode hotter	regulating mode colder	AUT	regulating mode	regulating mode	regulating mode
0	-	-	-	0			
max /+II	-	-	-	max /+II			

▲ = hotter  
▼ = colder

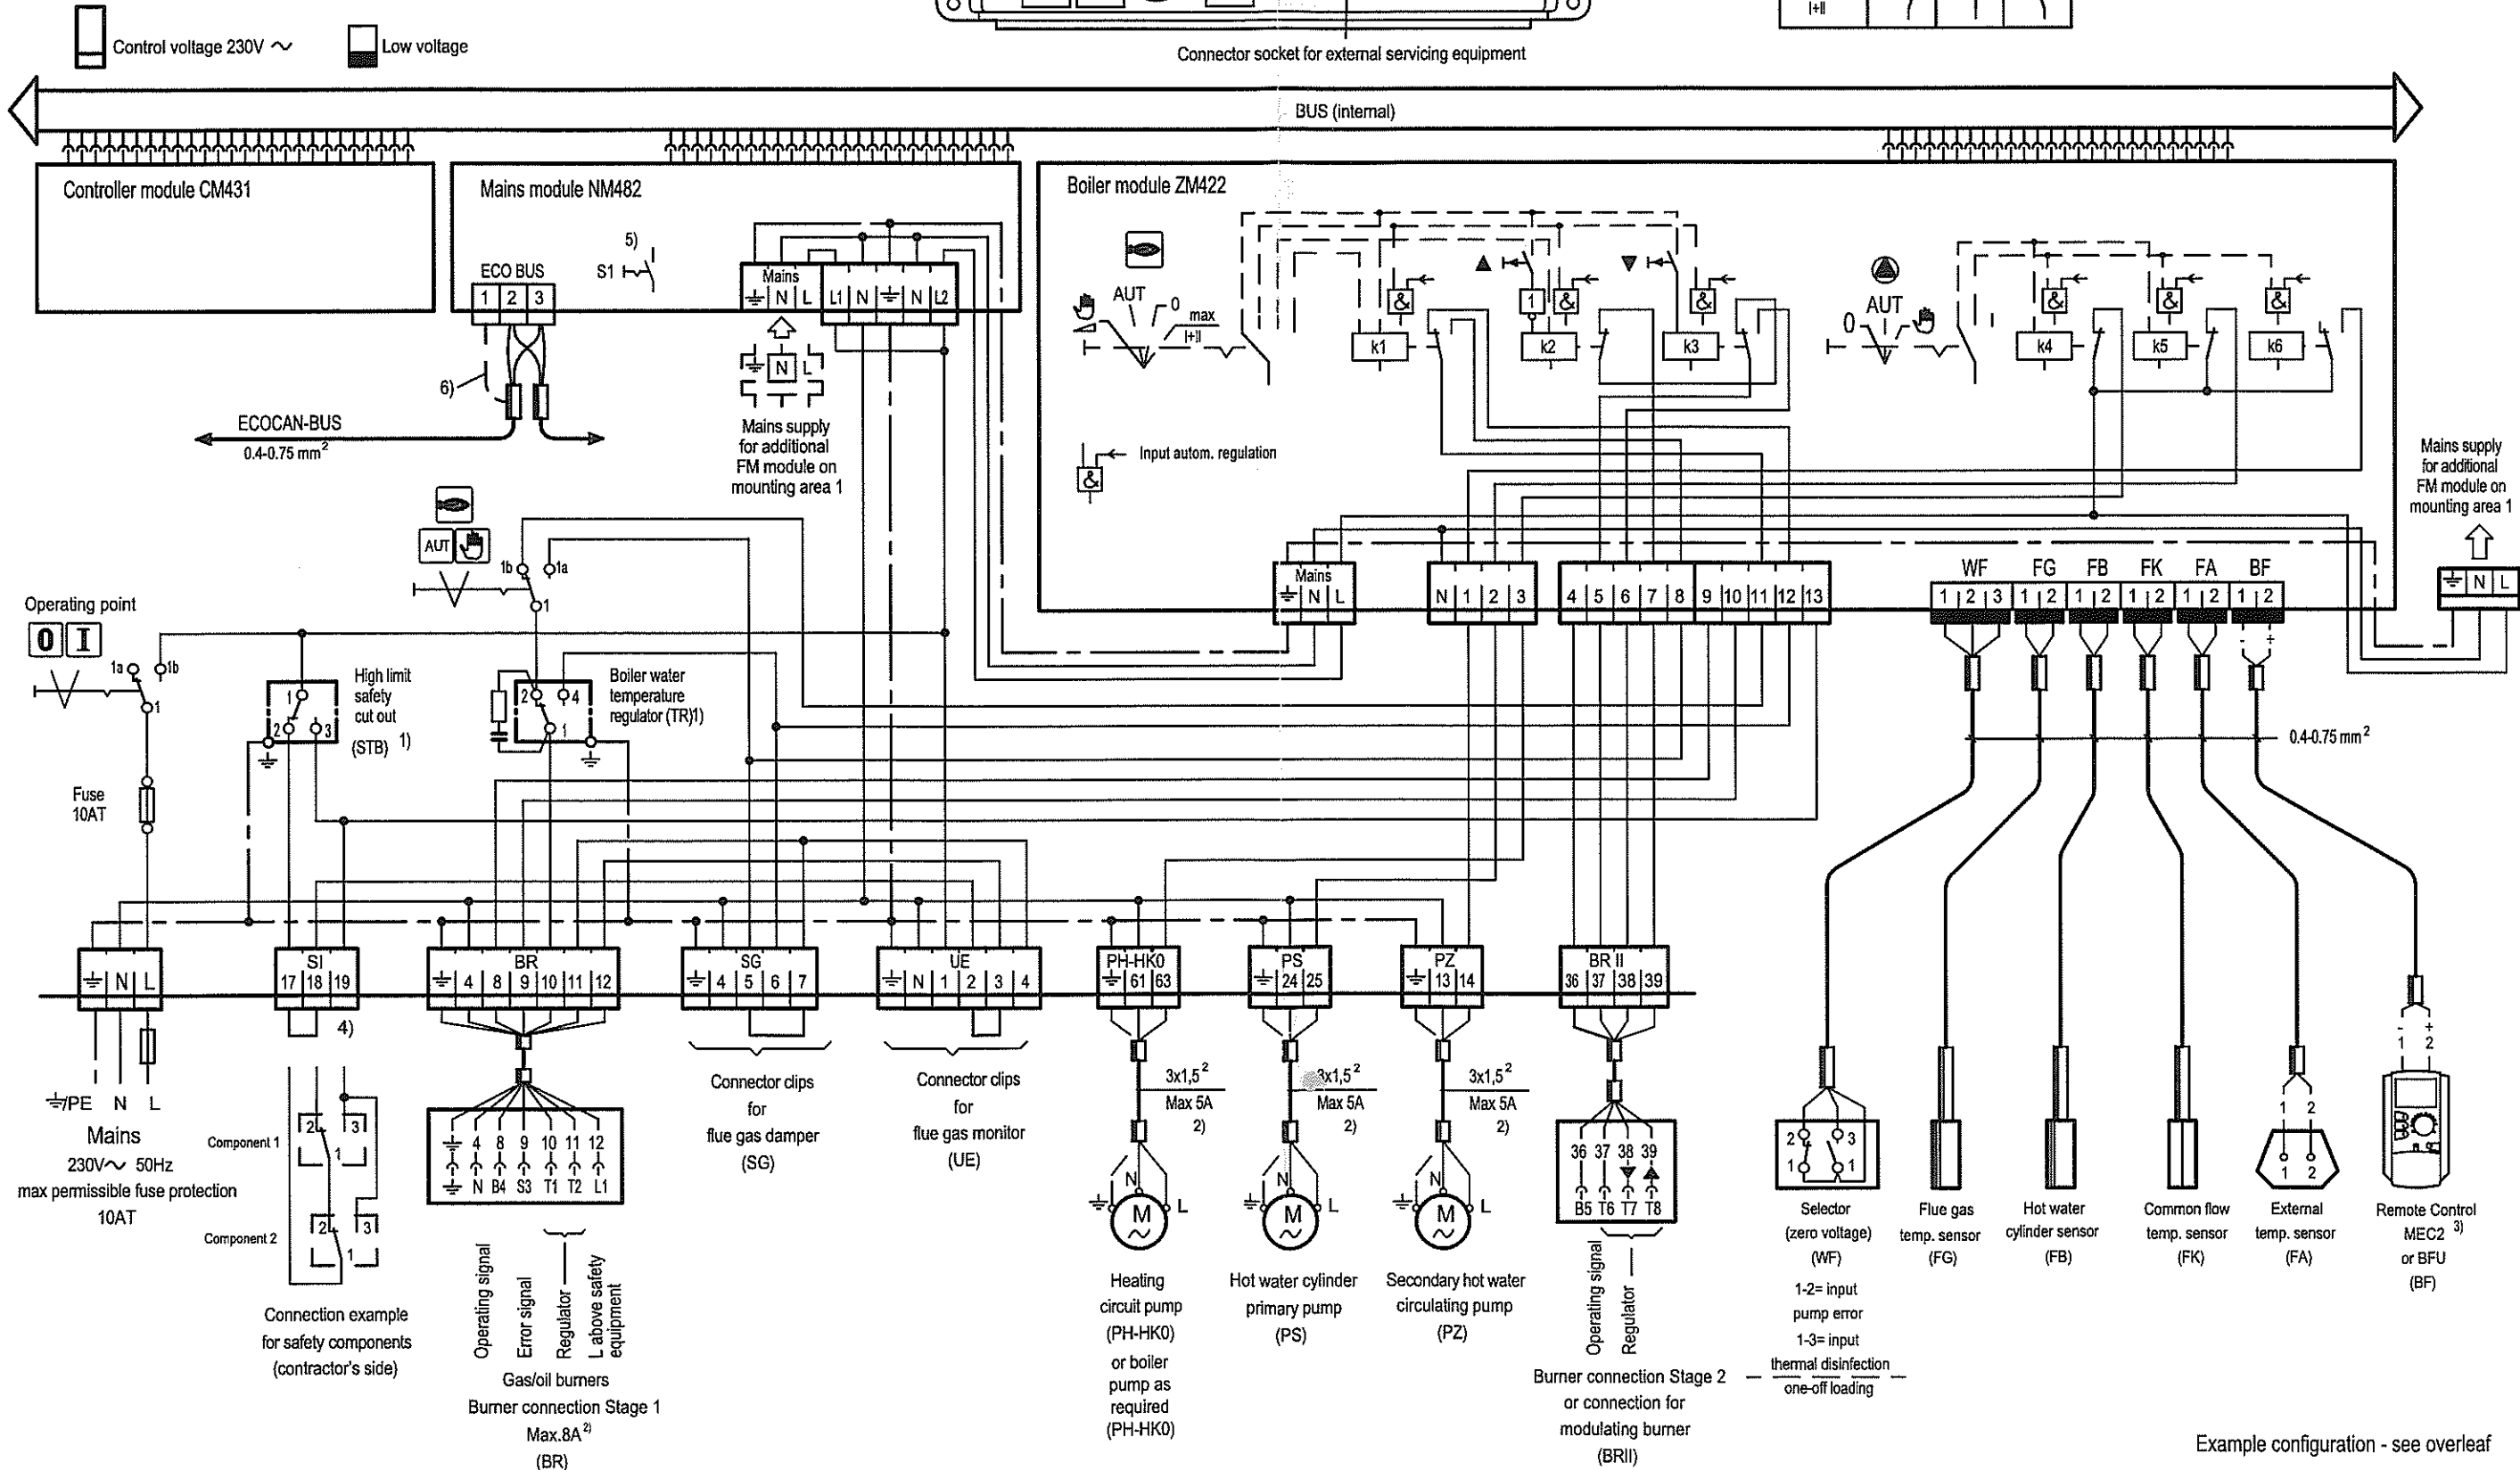

Example configuration - see overleaf